


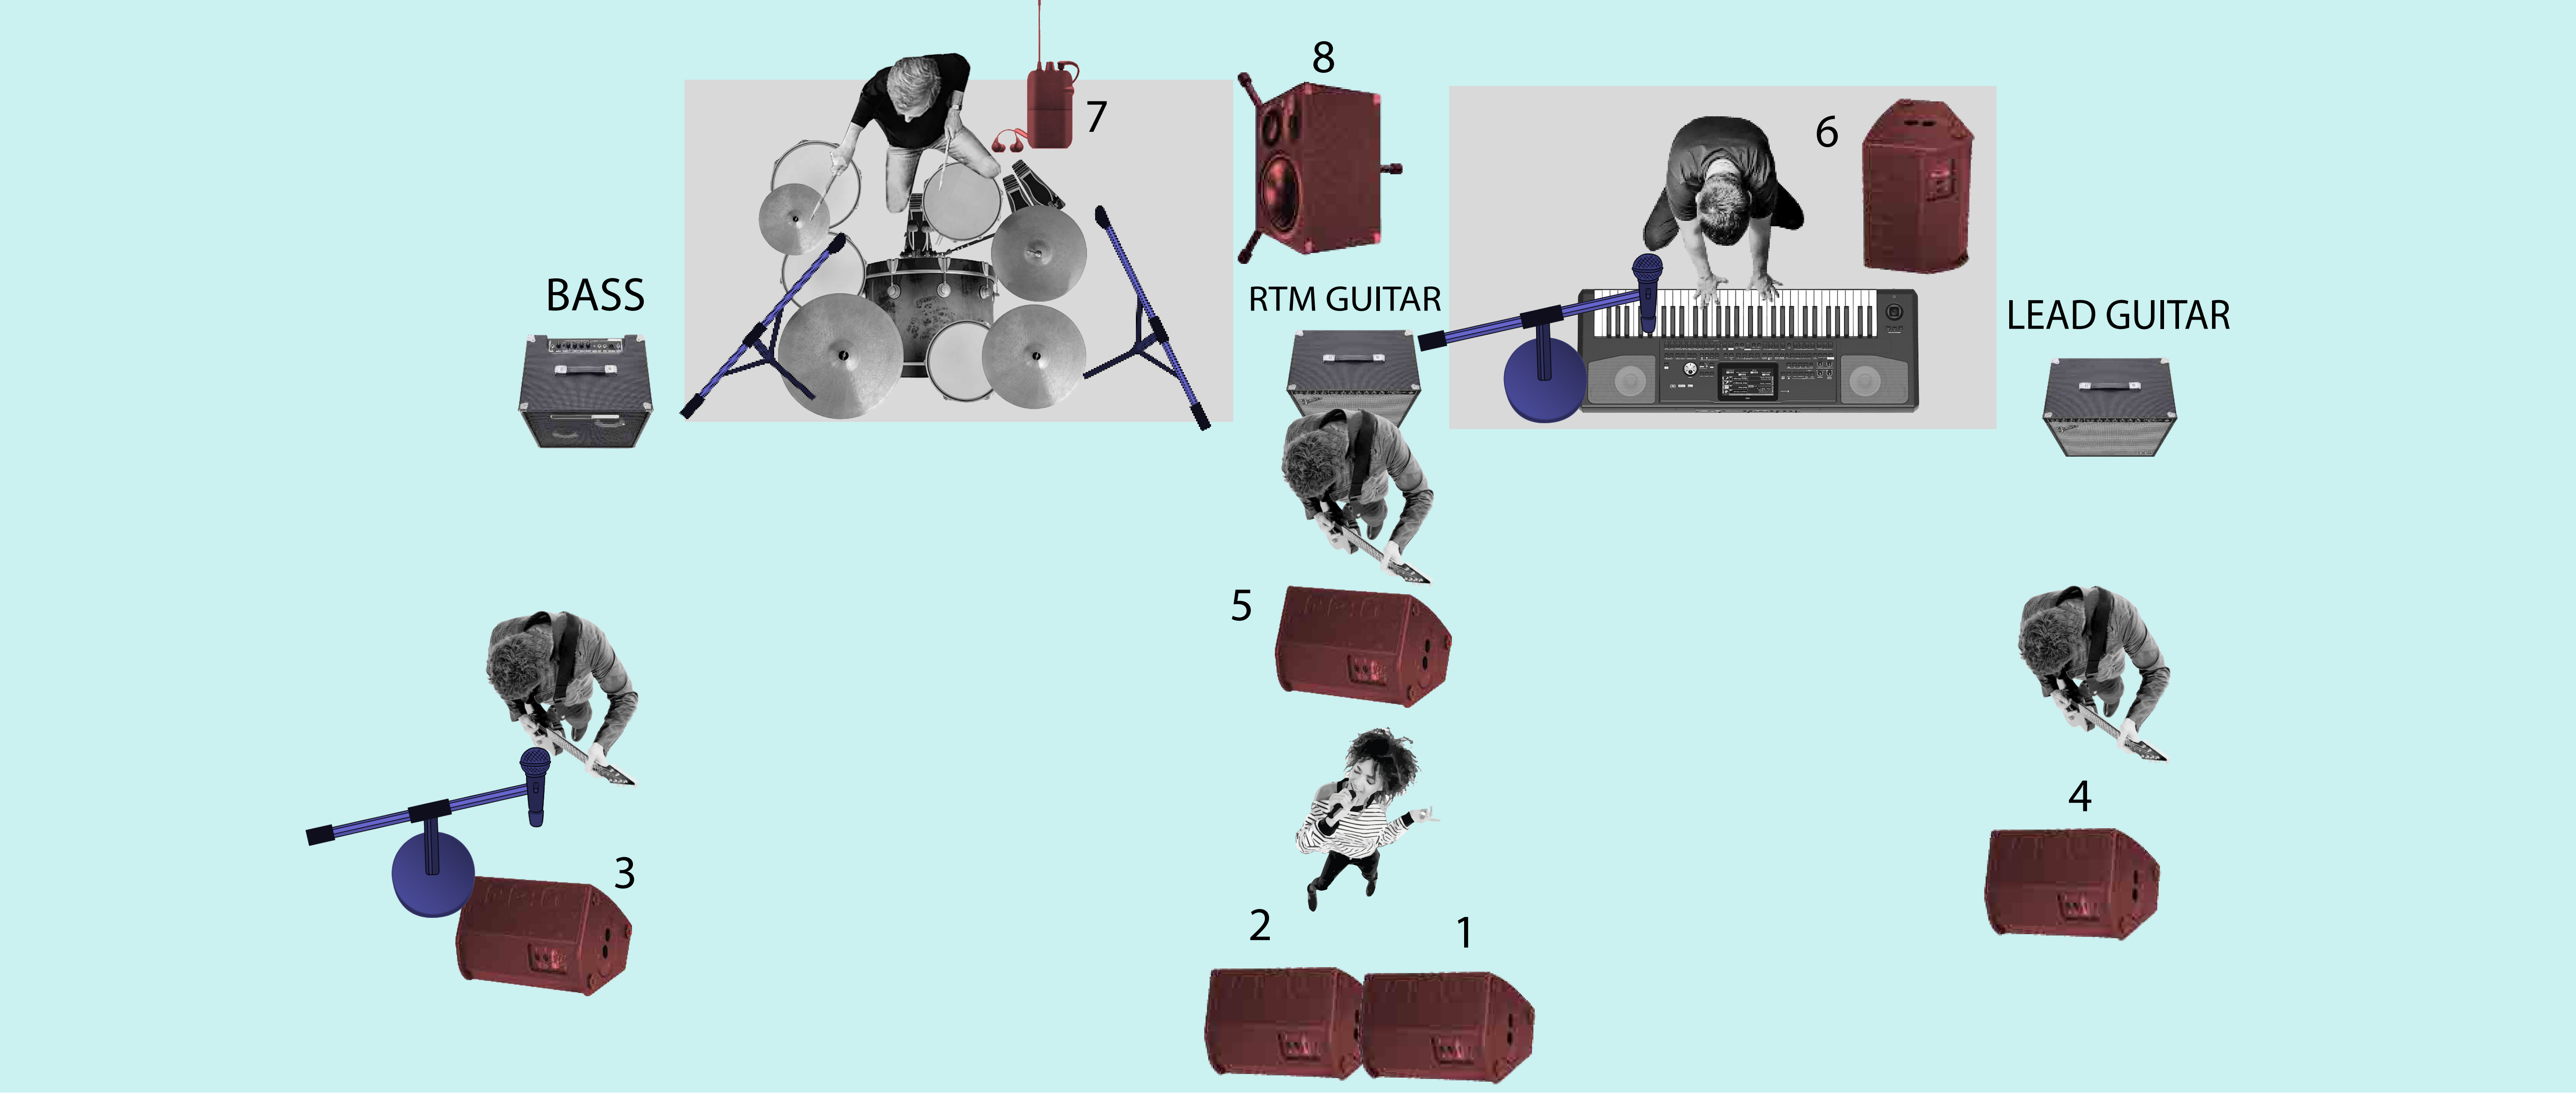

CHANNEL LIST	MIC/D.I.	STAND		AUX	
1 KIK	SHURE BETA 52	SHORT BOOM		1	LEAD VOX LEFT
2 SNARE TOP	SHURE SM 57	SHORT BOOM		2	LEAD VOX RIGHT
3 SNARE BOTTOM	CONDENSER			3	BASS
4 TOM	BF 604 OR SIMILAR			4	LEAD GUIT
5 F.TOM 1	BF 604 OR SIMILAR			5	RTM GUIT
6 F.TOM 2	BF 604 OR SIMILAR			6	PIANO
7 OH LEFT	NEUMANN KM 185 OR SIMILAR			7	DRUM IN-EAR
8 OH RIGHT	NEUMANN KM 185 OR SIMILAR			8	DRUM FILL
9 BASS	AMP D.I. OR MIC				
10 EGT LEFT	SM 57 OR SIMILAR	SHORT BOOM			
11 EGT RIGHT	SM 57 OR SIMILAR	SHORT BOOM			
12 PIANO LEFT	D.I. BOX				
13 PIANO RIGHT	D.I. BOX				
14 VOX PIANO	SM 58 OR SIMILAR				
15 VOX BASS	SM 58 OR SIMILAR				
16 LEAD VOX	SM 58 OR SIMILAR	STRAIGHT BOOM			
BACKLINE					
DRUM SET: Kick 20" or 22" Floor Tom 14" or 16" Tom 12" or 13" Snare 14" Coated heads					
Cymbals: HiHat 14" Ride 20" Crashes 16" and 18"					
Hardware:					
Kick Pedal 3 Cymbal Boom stand Hihat stand Throne Carpet 200x150 min. American Tape Scotch Microphones for Drums and Cymbals BASS: HEAD GALLIEN KRUEGER RB 700 MK2 + CABINET GALLIEN KRUEGER RBH410 OR SIMILAR LEAD GUITAR : COMBO FENDER TWIN REVERB OR SIMILAR RITM GUITAR : COMBO FENDER TWIN REVERB OR SIMILAR PIANIST : PIANO 88 KEYS STUDIOLOGIC NUMA CONCERT					